

Garden **WALLSCAPES**


Finally... a mortarless garden wall system
that's easy to handle!

Where function meets style




ABBOTSFORD
CONCRETE PRODUCTS

Stair Details

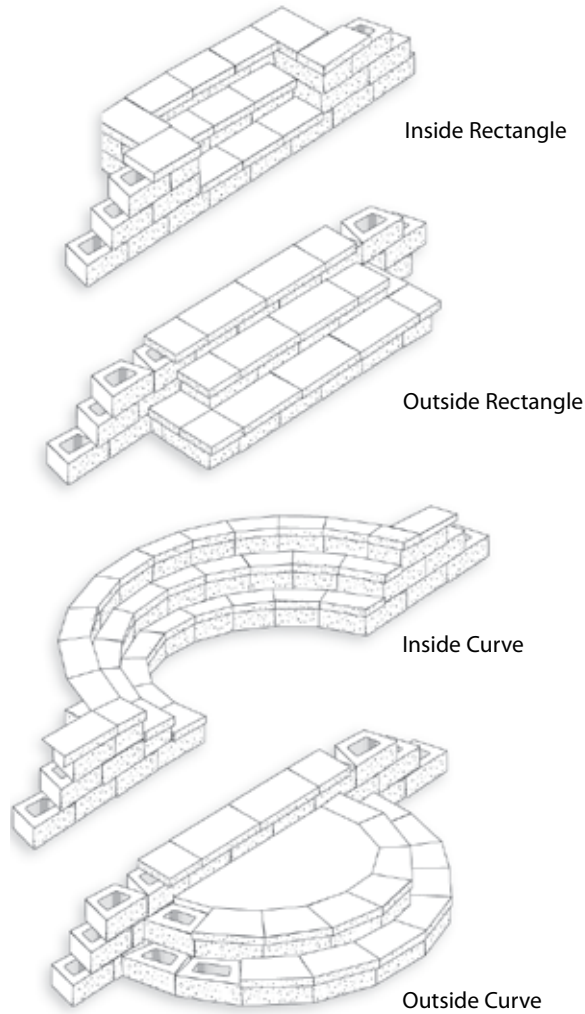

Corner & Capping Details

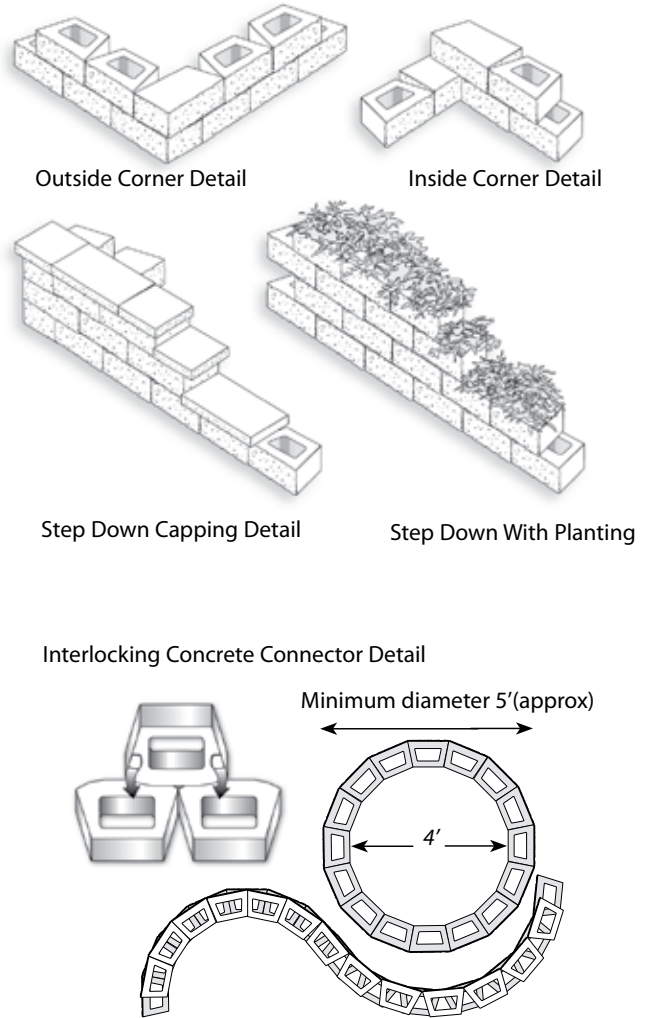

Colors and Face Types



Classic Face - Shadow



Classic Face - Sandalwood



Classic Face - Teak



Classic Face - Moroccan Sunset



Quarry Face - Shadow



Quarry Face - Sandalwood



Quarry Face - Teak




Quarry Face - Moroccan Sunset


With Abbotsford Concretes' Garden WallScapes, you can create beautiful retaining walls, stairs and raised garden beds that will enhance any landscape for many years to come.




- Mortarless interlocking installation
- Small blocks are easy to work with
- Versatile
- Light-weight (only 25lbs each)

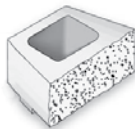


Classic Face
12"(w) x 6"(h) x 7-1/2"(d)
25 lbs

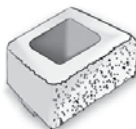

Quarry Face

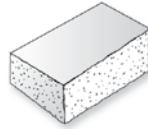

Corner Unit
14"(w) x 6"(h) x 8"(d)
57 lbs

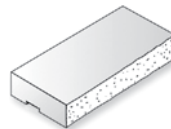

Cap
18"(w) x 9"(d) x 2-3/8"(h)
29 lbs



Tumbled Cap
7-1/8"(w) x 9"(d) x 2-3/8"(h)
12 lbs

Visit our website at www.pavingstones.com for our complete product guide, design details and photo gallery or call toll free 1-800-663-4091



1. Dig a base trench 16 inches wide and 6 inches deep. Remove all vegetation and unsuitable organic soils. (Do not use these for structural backfill)



2. Compact the soil base properly.



3. Fill the trench with 4 inches of well-graded gravel material, (1/2" minus or 3/4" minus road mulch) compacting firmly in 2-inch layers to ensure proper compaction. Note: Hand tamping tools may be used, but vibrating compaction equipment is recommended.



4. Level the gravel base from front to back and side to side. This procedure will ensure a straight and stable wall.



5. Lay your first course using a string line to help with alignment. Place each unit edge-to-edge, lining up the back of the units with the string. For smooth curves use flexible 1" PVC pipe as your guide.



A perforated drainage pipe must be placed at the base of the wall and must be sloped toward a catch basin or drainage area.




6. As you lay each unit of the first row, check the level of the block from side to side and front to back. Careful preparation of this base row is the key to having a successful and attractive finished project.

7. Start stacking the remaining rows; make sure to sweep the top of each course of units to clear debris. Half stagger the next row so each unit is centered on two units below. Pull each unit forward to lock connecting lugs in place. Corners must be secured using an approved concrete adhesive.

8. Fill the hollow core of the units and the trench behind the wall with free-draining crushed gravel, making sure to carefully compact this material to help lock the units in place. Repeat this procedure for each row.

9. Place filter fabric on top of the backfill and drainage materials. This will ensure that the "drainage chimney" remains clear. Cover with topsoil.

10. Sweep off the top course of units. Secure caps to the top of the wall using an approved concrete adhesive. Use a level piece of string to properly align the capping.

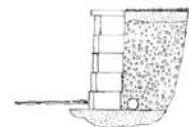

Easy Calculation Chart

Match the number of rows with the length of your wall to find the number of blocks you will need. Garden WallScapes should not exceed 5 rows in height without consulting a professional engineer.

One corner unit is required for every corner in a row as well as each step-down.

- Notes:
1. Each course of Garden WallScapes has a 3° batter or setback which is approx 3/8" per course.
 2. When terracing, you must step back twice the distance of the height of the lower wall.

Wall Height	Wall Length					
	5'	10'	15'	20'	25'	30'
6"	5	10	15	20	25	30
12"	10	20	30	40	50	60
18"	15	30	45	60	75	90
24"	20	40	60	80	100	120
30"	25	50	75	100	125	150

Visit our website at www.pavingstones.com for our complete product guide, design details and photo gallery or call toll free 1-800-663-4091